



Technical Bulletin


Wireless 2-Button PANIC

It has been discovered that on rare occasions, it could be possible to activate the Wireless Double Push Panic button with one digit (depending on size and depression force)


RISCO recommends the following to alleviate this possibility:

1. Open up the Wireless PA button (one screw on the back of the unit)
2. Prise open the two halves of the unit with a small screwdriver
3. Remove the PCB from within the unit
4. You will see on the rubber membrane. Moulded onto each button place, is a small rubber post (one for each button)

5. Cut approx half the length of the rubber post off.

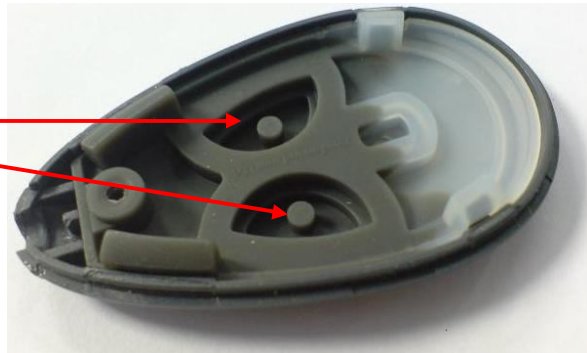

6. The rubber posts will be shorter
Once cut.

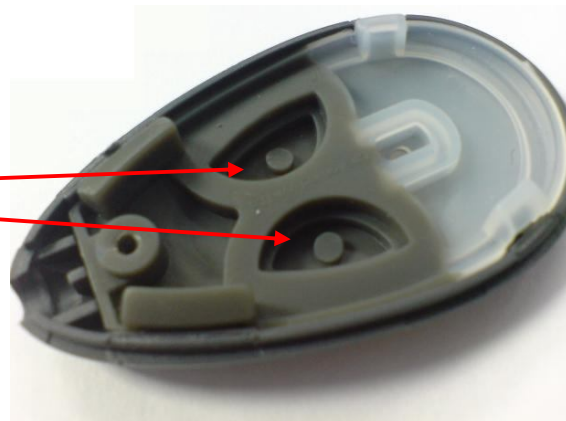

The outcome is that more pressure will now be required (from two fingers) in order for both buttons to be pressed.

Please note: All future deliveries will have this modification performed